



Fitting Instructions

The installation of the bath will be seen as an acceptance of quality. Please ensure you have thoroughly inspected the bath.

NB. Due to the Bath design, all waste and pipe work need to be below floor level prior to installation.

It is recommended that the bath is installed by a qualified plumber. All instructions must be carried out otherwise we cannot take responsibility for incorrect installations. We do not give any advice on DIY installations.

WE WOULD ADVISE CHECKING THE BATH UPON DELIVERY.
WE STRONGLY RECOMMEND THAT ALL PROTECTIVE PACKAGING REMAINS ON THE BATH UNTIL ALL REFURBISHMENTS ARE COMPLETED.

The installation of the bath

- A) All waste and pipe work needs to be below floor level prior to installation.
- B) Position the bath in the desired location and mark the centre of the waste outlet on the floor.
- C) Remove the bath, prepare suitable waste pipe work beneath floor level to accommodate the p-trap and waste pipe work. (Diagram 1)

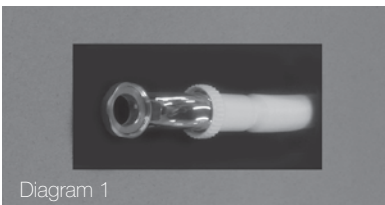


Diagram 1

- D) Install waste pipe with a 400mm flexi pipe. This needs to be exposed above floor level. (Diagram 2)

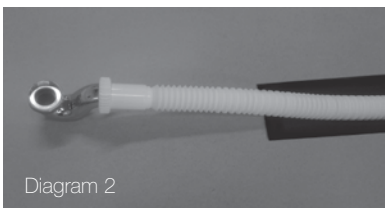


Diagram 2

- E) Re-position bath with the bath on its side. Install the p-trap and connect the 400mm length of flexi pipe to the p-trap. (Diagram 3)



Diagram 3

- F) Install the waste kit to the bath and then connect to the p-trap.
- G) Run the taps and check for leaks.
- H) Re-check for leaks. When satisfied, tilt the bath and apply clear silicone to the base of the bath.