

Fitting Instructions

We would strongly advise that you examine the bath upon delivery and recommend that all protective packaging remains on your purchase until all refurbishments are completed.

The installation of the bath will be seen as an acceptance of quality and we will not accept any responsibility for any damage of imperfection once installed

It is recommended that the bath is installed by a qualified plumber. All instructions must be carried out otherwise this may invalidate your guarantee. We cannot accept responsibility for incorrect installations. We do not give any advice on DIY installations.

Full fitting instructions are available online at: www.ashtonandbentley.co.uk

Drilling your Ashton and Bentley Bath

We strongly recommend that any drilling requirements are requested prior to purchase. Ashton and Bentley carry out a free of charge factory service for this work.

Tap holes can be drilled in the rim by third party installers, provided that they follow the instructions provided with the bath.

We do not recommend any drilling in the plinth or around the base of the bath is carried out by third party installers, as this could adversely affect the integrity of the bath. Any bath drilled in these areas by third party installers will not be covered under the guarantee.

Underfloor Heating


To reduce potential issues of thermal cycling effects, avoid the installation of heating elements or pipes directly below the bath. Any installation of this type will invalidate your guarantee.

Bath Installation


A) NB. All waste and pipe work will need to be below floor level prior to installation.

B) On a flat level surface, position the bath in the desired location and mark the centre of the waste outlet on the floor.

C) Remove the bath, prepare suitable waste pipe work beneath floor level to accommodate the p-trap and waste pipe work. (Diagram 1)

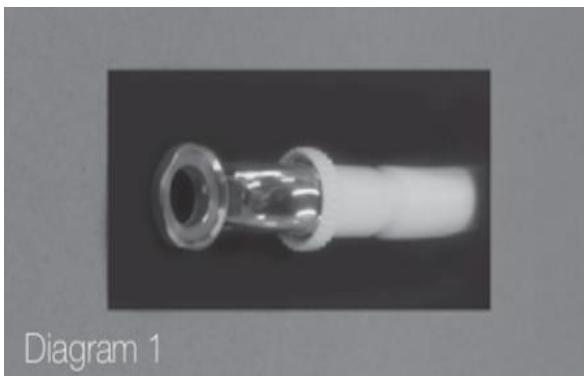

D) Install waste pipe with a 400mm flexi pipe. This needs to be exposed above floor level.
(Diagram 2)

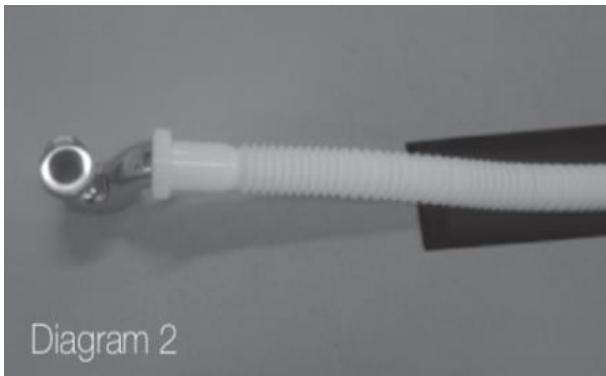

E) Re-position bath with the bath on its side. Install the p-trap and connect the 400mm length of flexi pipe to the p-trap. (Diagram 3)



F) Install the waste kit to the bath and then connect to the p-trap.

G) Run the taps and check for leaks.

H) Re-check for leaks. When satisfied, tilt the bath and apply clear silicone to the base of the bath.